

T-25 Battery Replacement

To replace the T 25 Key Fob battery, the shell of the transmitter must be removed. Using only a fingernail, pry between the depression around the shell and separate the Fob into 2 pieces exposing the battery as shown in Fig. D. Replacement batteries are 12v part # GP23A, CN23A, EL12 and VR22 or similar class battery.

Replacement battery must be installed as shown in Fig. D. Its orientation is specific to - + polarities clearly marked.

Replace cover and test.

T-25 Transmitter

Front With Cover

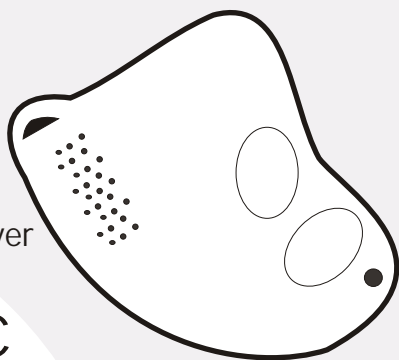


Fig. C

Front With Cover Off

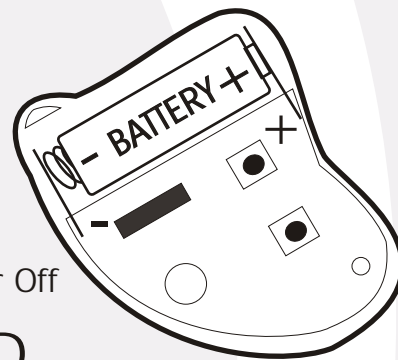


Fig. D