




_azv Action Lock with Cover

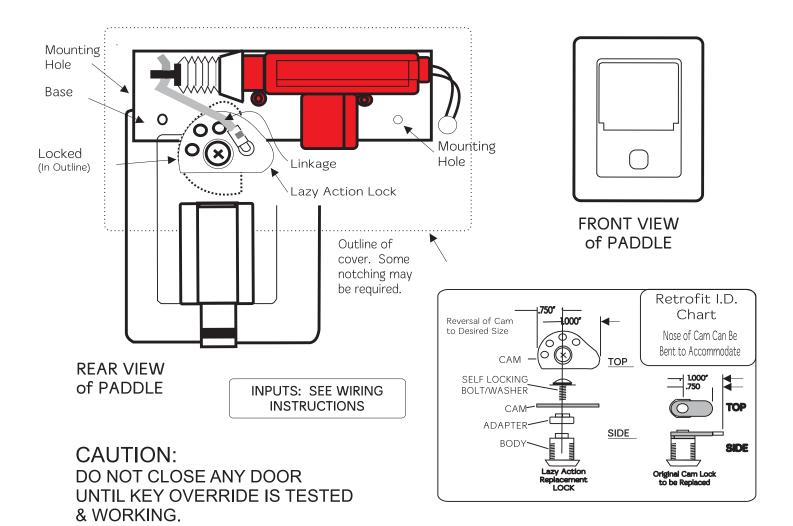

LOCK REPLACEMENT RECOMMENDATIONS

- 1. Remove existing lock from back by removing nut threaded to lock body.
- 2. Install provided **Lazy Action Lock** in the same order as the exploded diagram. (Lock assembly is shipped in the correct orientation).
- 3. Connect the pre-bent linkage to the cam and actuator. (This helps in finding the most desirable location for the actuator). In the event the rod is lengthened, never exceed 8" in length to assure proper latching when vehicle is in motion.
- 4. Any modifications to the connecting linkage may result in provided cover not fitting correctly.

Note: To prevent loosening of the nut that holds the lock body, a s very small amount of rubberized silicone should be applied at the base of the lock threads. The use of silicone lubrication is recommended.

