

Factory Power Lock Tool Box

Cross Bed and Side Boxes

Tool Box Power Locking

Cross Bed and Side Boxes

Converts Many of the Most Common Tool Boxes

Part #PLIV-PL801 Single Power Lock Kit.

Information Includes:
PLIV- PD Series
PI801 Mounting Base.

- 1 See: Cab to Body Interface Instructions


Drivers or passengers kick panel will need to be removed to access OEM power door lock wires

- 2 Trunk wire to tailgate No. 16 Ga. wire minimum

- 3 Grommet all penetrations and wire tie to existing wiring harness


- 4 See PL and Flat Act power lock I.D. for appropriate locking

- 5 The average trunk wire from cab to tailgate

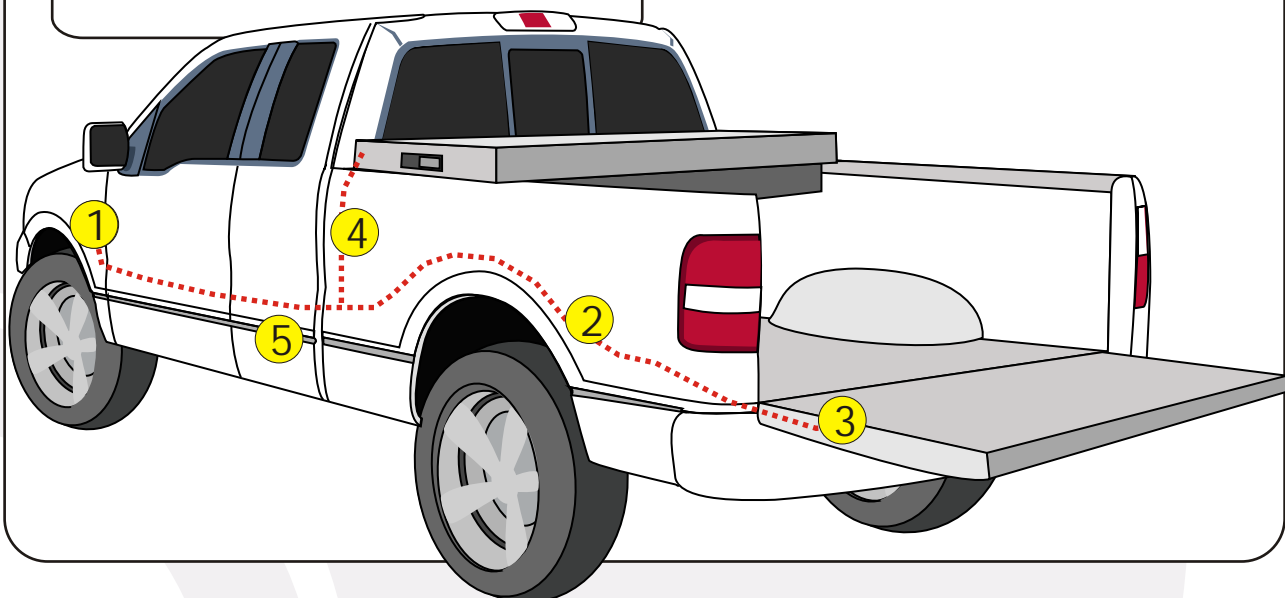



PL801 Adhesive Base Install

Adhesive base PL801 and others require that their surfaces be cleaned. It is recommended that #00 steel-wool or a scuffing pad be used, followed by a solvent, such as Acetone / Lacquer Thinner. Carefully select the final placement. Once installed its removal will damage the Base & Adhesive making them un reusable.

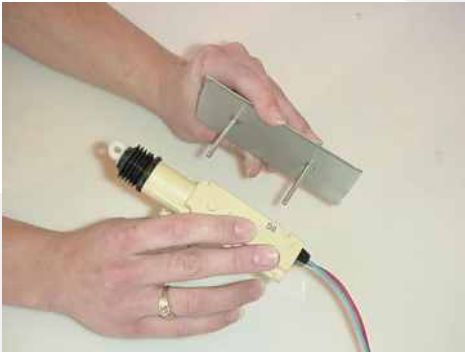

Attach Actuator To PL801 Base

Remove Adhesive Covering

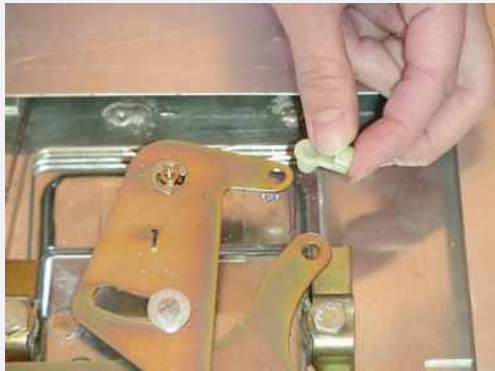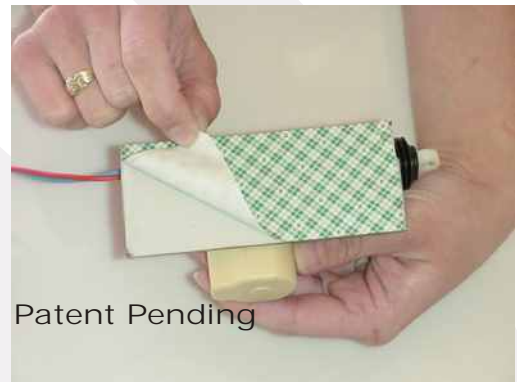

Connect Nylon Rod Connector To Latch

Connect Linkage To Actuator
Next Place Actuator



Cover Will Keep Actuator In Place