



# PLIV-B or C

Compartment Door


PLIV-B or C (Sliding Bolt)

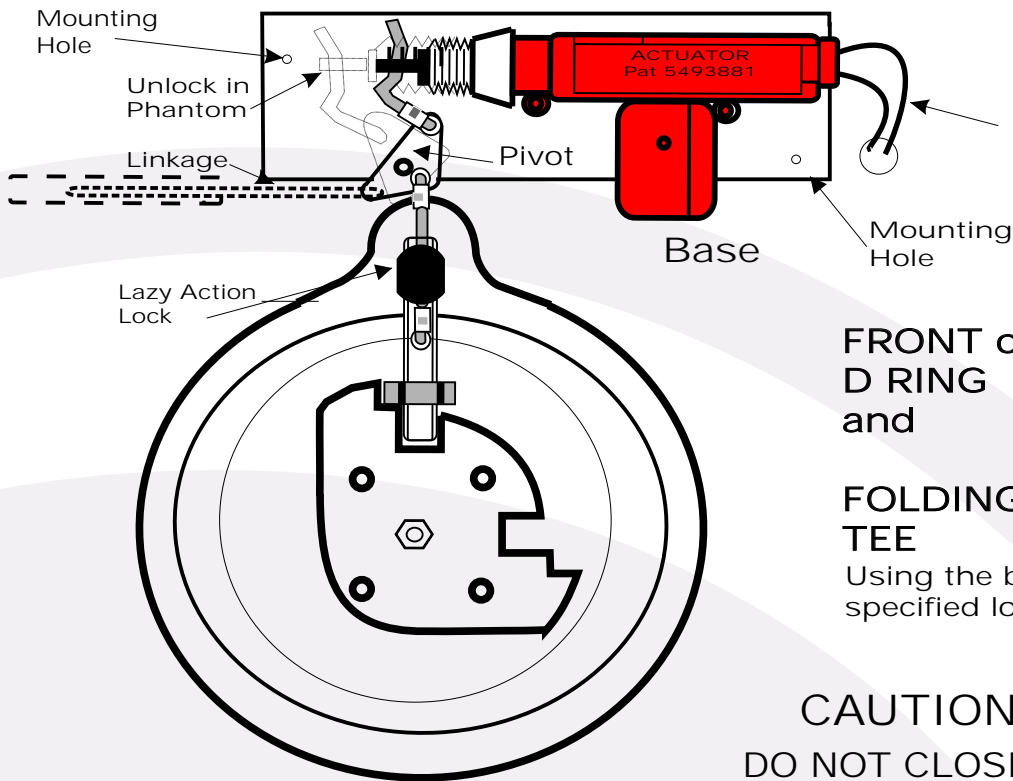

INPUTS: See Technical Stuff

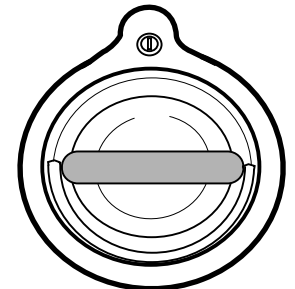

FRONT of D RING and

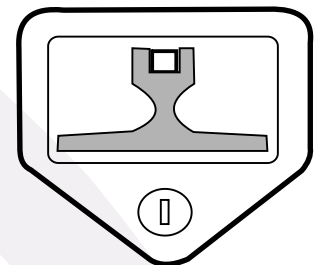

FOLDING TEE




Using the below specified lock

## CAUTION:

DO NOT CLOSE ANY DOOR UNTIL KEY OVERRIDE IS TESTED & WORKING.

Retrofit I.D. Chart  
One of the three sliding lock bolts will be included with PLIV. Specify B or C when ordering. For Rivet Style See (PLI-D).

### SLIDING BOLT I.D.

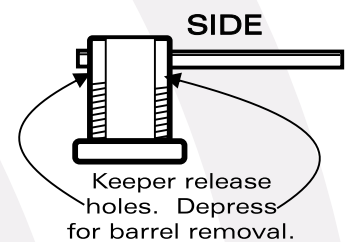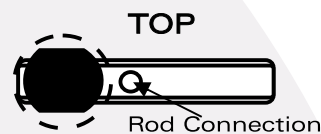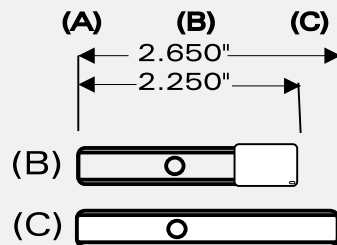

### Lock Replacement Recommendations

1. Remove existing lock from back by depressing one of the keepers shown below. (The keeper is found on the other side of the keys blades.)
2. Reinstall the provided Lazy Action Lock the same way.
3. Make final linkage to desired length. This will assist in the final location of the base. (Never exceed 8" of rod length to assure proper latching.)
4. Keep final linkage parallel with locking bolt for correct operation.
5. be sure key override is working correctly before doors are closed.
6. The use of silicone lubrication is recommended.